 


Kinglucky

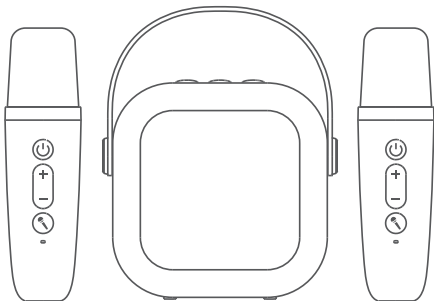


K12 USER MANUAL

Product Specifications


- Speaker Rating Power: 5W
 - Speaker Peak Power: 7.5W
 - SNR (Signal-to-Noise Ratio): 95dB
 - Speaker Battery Capacity: 1800mAh
 - Microphone Battery Capacity: 500mAh
 - Charging Voltage: DC 5V
 - Frequency Range: 90Hz-18kHz
-

Speaker Function Overview

1. **[Click]** Decrease Volume
[Long Press] Previous Track
2. **[Click]** Switch Play Mode (BT / TF Card / USB)
3. **[Click]** Increase Volume
[Long Press] Next Track
4. **[Click]** Change LED Lighting Effects
[Long Press] Turn Off LED Lighting
5. **[Click]** Pause / Play Audio
[Long Press] Power On / Off
6. **[Click]** Turn On / Off Vocal

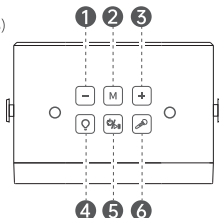


7. **3.5mm Headphone Jack:** Connect a 3.5mm audio cable to output audio.
8. **TF Card slot:** Automatically switches to TF mode when a card with MP3 files is inserted.
9. **Speaker Type-C 5V Charging Port**
10. **USB Port:** Automatically switches to USB mode when a device with MP3 files is inserted.
11. **Speaker Indicator Light:**
Blue Light Blinks: BT Not connected
Solid Blue Light: BT Connected successfully
Red Light on: Charging
Red Light off: Fully charged

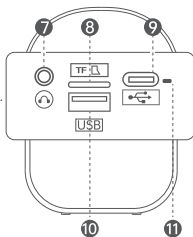

Microphone Function Overview

1. **[Long Press]** Power On / Off
2. **[Click]** Increase Volume
3. **[Click]** Decrease Volume
4. **[Click]** Turn On/Off Echo
[Long Press] Switch Voice Effects
[Double Click] Enable / Disable Original Sound Removal

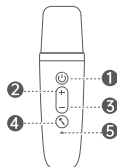

5. **[Flashing Blue]** Not Connected
[Solid Blue] Connected Successfully
[Red Light On] Charging
[Red Light Off] Fully Charged



6. Microphone Type-C 5v Charging Port
-

Q&A

Q: How do I activate my free premium benefits?

A: Scan the OR code on the premium card or email us at kingluckyare@gmail.com. We'll reply promptly :)

Q: How do I connect BT?

A: Go to your mobile device's BT settings, find "Kinglucky Karaoke K12," and tap it to connect.

Q: How do I enable/disable the echo effect?

A: Press and hold the "Microphone" button on the mic. It will cycle through the magic voice modes, and eventually, you will find the original sound mode with no echo.

Q: How do I adjust the volume?

A: Both the microphone and the speaker have separate volume controls. To lower the background sound, press the "-" on the speaker. To lower the mic volume, press the "-" on the microphone.